


Grounding Scheme

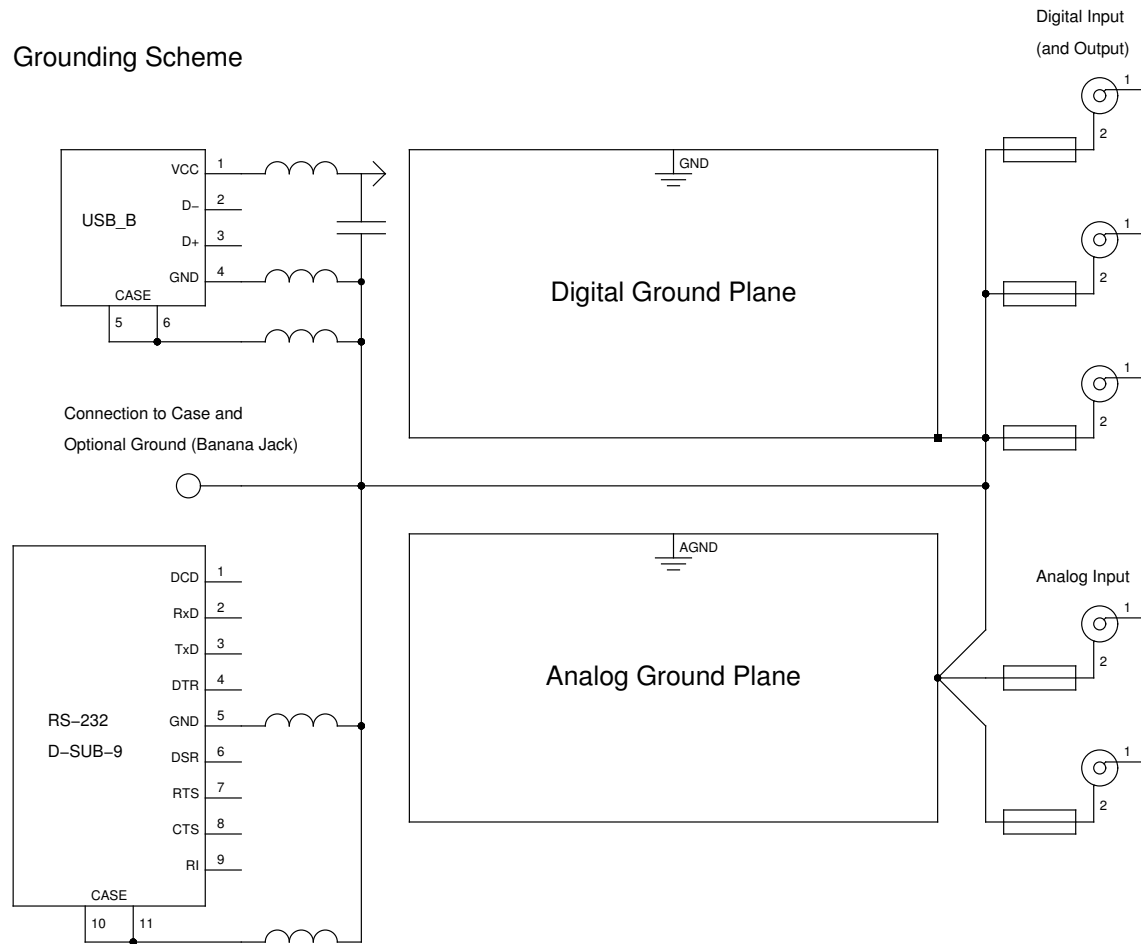

Remarks

- BNC connectors have no direct connection to Case
- Optional Fuses (1A, 0.2 OHM) will limit ground current to PC if BNC shield is connected to mains voltage (accident)

DAD/DSO, Grounding

File: Grounding.sch	Sheet: Appendix A
Author: S. Salewski	Rev: A 0.01
Copyright: All Rights Reserved	Date: 14-SEP-2008